

ThinkVision™ Flat Panel Monitor



L150

User's Guide

English

English

First Edition (June/2003)

Note: For important information, refer to the Monitor Safety and Warranty manual that comes with this monitor.

Contents

Safety (Read first)	2
Setting up the Monitor	3
Product Description	3
Handling Instructions	3
Workplace Preparation	4
Adjusting the Monitor Position	4
Working Practices	4
Caring for your Monitor	5
Connecting your Monitor	6
Turning on your Monitor	7
Installing the Device Driver	8
Windows 95 or Windows 98	8
Windows 2000 or Windows Me	9
Windows XP	10
Automatic Image Setup	11
Image Setup	11
Image Setup for DOS	12
Setup for Windows 95, Windows 98, Windows NT, Windows 2000, Windows Me or Windows XP	13
Manual Image Setup	14
Adjusting your LCD Monitor	15
User Controls Accessible Via On Screen Display (OSD)	15
On-Screen Display (OSD) Controls	17
Further Information	20
Display Modes	20
Power Management	21
Product Disposal	21
Troubleshooting	22
Help and Service Information	25
Specifications	26
Service Information	27
Notices and Trademarks	28



Safety: Read first

Before installing this product, read the Safety Information.

Avant d'installer ce produit, lisez les consignes de sécurité.

Vor der Installation dieses Produkts die Sicherheitshinweise lesen.

Πριν εγκαταστήσετε το προϊόν αυτό, διαβάστε τις πληροφορίες ασφάλειας (safety information).

לפני שתתקינו מוצר זה, קראו את הוראות הבטיחות.

A termék telepítése előtt olvassa el a Biztonsági előírásokat!

Prima di installare questo prodotto, leggere le Informazioni sulla Sicurezza

Antes de instalar este produto, leia as Informações de Segurança.

Läs säkerhetsinformationen innan du installerar den här produkten.

Prije instalacije ovog produkta obavezno pročitajte Sigurnosne Upute.

Les sikkerhetsinformasjonen (Safety Information) før du installerer dette produktet.

Przed zainstalowaniem tego produktu, należy zapoznać się z książką "Informacje dotyczące bezpieczeństwa" (Safety Information).

Пред да се инсталира овој продукт, прочитајте информацијата за безбедност.

Pred inštaláciou tohto zariadenia si peeítajte Bezpeènostné predpisy.

Pred namestitvijo tega proizvoda preberite Varnostne informacije.

Ennen kuin asennat t m n tuotteen, lue turvaohjeet kohdasta Safety Information.

Před instalac tohoto produktu si přeètěte příručku bezpečnostních instrukcí.

在安裝本產品之前，請仔細閱讀 Safety Information (安全信息)。

安裝本產品之前，請先閱讀「安全資訊」。

مج، يجب قراءة دات السلامة

Læs sikkerhedsforskrifterne, før du installerer dette produkt.

製品を設置する前に、安全情報をお読みください。

본 제품을 설치하기 전에 안전 정보를 읽으십시오.

Antes de instalar este producto lea la información de seguridad.

Antes de instalar este produto, leia as Informações de Segurança.

Setting up the Monitor

Product Description

The IBM ThinkVision L150 Monitor works with a computer with a suitable on-board sub-system or Video Adapter card that can support XGA 1024 x 768, SVGA 800 x 600, or VGA 640 x 480 at 75 Hz.


Your option package includes the following:

- IBM ThinkVision L150 Monitor
- User's Guide and Installation Files CD
- Monitor Safety and Warranty Information Manual
- L150 Setup Guide
- Power Cord
- Analog Interface Cable - Attached to Monitor

Handling Instructions

Do not support the monitor within the screen area. The Liquid Crystal Display is glass and can be damaged by rough handling or excessive pressure.

1. To lift the monitor, place your hands on the areas indicated below.

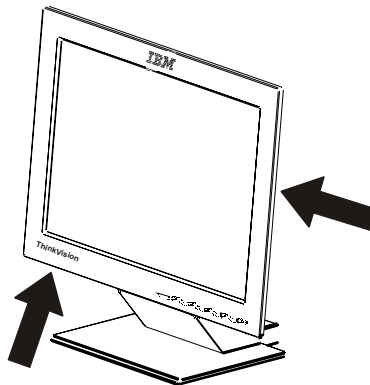

2. Before using your monitor for the first time, remove the clear protective film from the front of the screen.

Workplace Preparation

i This section gives advice on what you should consider before you set up your monitor.

Height

Position the monitor so that the top of the screen is slightly below your eye level when you sit at your workstation.


Orientation

Choose a position that gives the least reflection from lights and windows, usually at a right angle to any windows. Position the monitor directly in front of you so that you do not have to twist your body to use it. Tilt the monitor to a comfortable viewing angle.

Adjusting the Monitor Position

Viewing Angle

You can tilt the screen backward and forward as shown below.

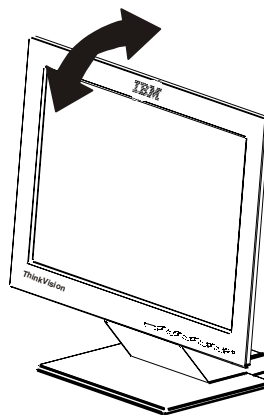

Working Practices

i This section gives advice on how you can work comfortably and reduce fatigue.

Rest

Take regular breaks. Vary your posture, stand up and stretch occasionally as prolonged use of computer workstations can be tiring.

Back

Sit back in your chair and use the backrest.

Hands

Adjust the seat height so that your forearms are approximately horizontal and your wrists are straight when using the keyboard. Your upper arms should be relaxed with your elbows near your body.

Use a light touch on the keyboard, keeping your hands and fingers relaxed. Allow a space in front of the keyboard to rest your wrists when not typing. Consider using a wristpad.

Eyesight

Working with monitors, in common with any prolonged close work, can be visually demanding. Look away from the screen periodically and have your eyesight checked regularly.

Screen settings

Set the screen brightness and contrast to a comfortable level. You may have to adjust this as the lighting changes during the day. Many application programs let you select color combinations which can help you to view in comfort. See the ***User Controls Accessible Via On Screen Display (OSD)*** section on page 15 for more information.

Caring for your Monitor


Be sure to turn off the power before you perform any maintenance on the monitor. Clean your monitor as follows:

- Gently wipe the device covers and the screen with a soft cloth.
- Remove finger marks and grease with a damp cloth and mild detergent; do not use solvents or abrasives.
- Never use flammable cleaning material to clean your IBM monitor or any other electrical apparatus.


Connecting your Monitor

Be sure to read the 'Safety' Information located in the Monitor Safety and Warranty Information Manual before carrying out this procedure.

1. Turn off your computer and all attached devices.
2. Connect the signal cable to the video port on the back of your computer. This port might be directly attached to your computer (figure A), or it might be part of a video adapter card (figure B). The video port on your computer or video adapter card might be blue to match the blue connector on your monitor's video cable.

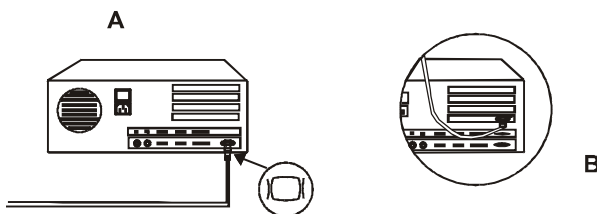


3. The supplied power cord is not attached to the monitor. If you would like to route the power cord through the stand, follow the instructions below:

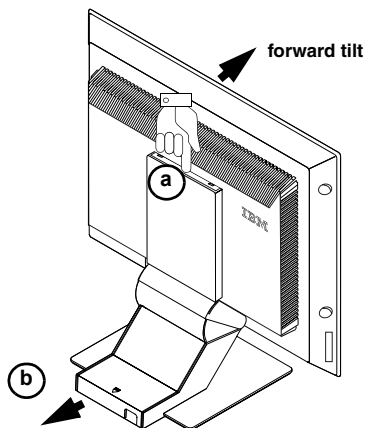


- a. Tilt the monitor all the way forward.
- b. Hold the top of the cable cover (a) and pull it off.
- c. Gently lift the stand cover (b) and slide it backwards and off the stand.

- d. Connect the power cord to the power port on the back of your monitor as shown in the illustration below.

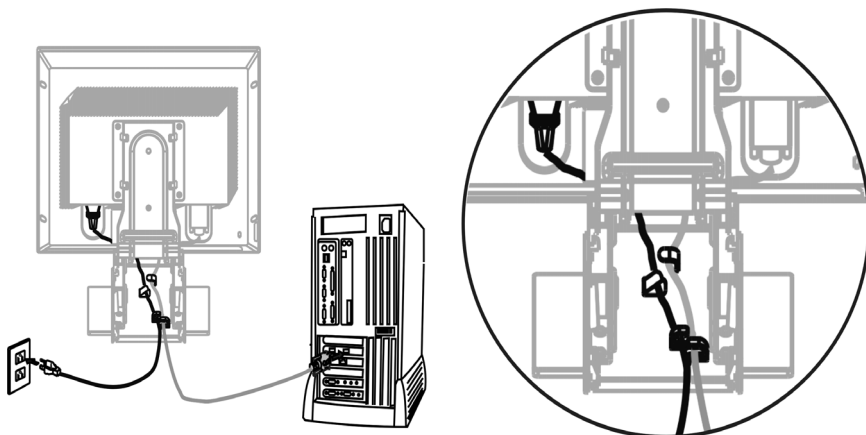


- e. Put the stand cover (e) back then put the cable cover (f) back.

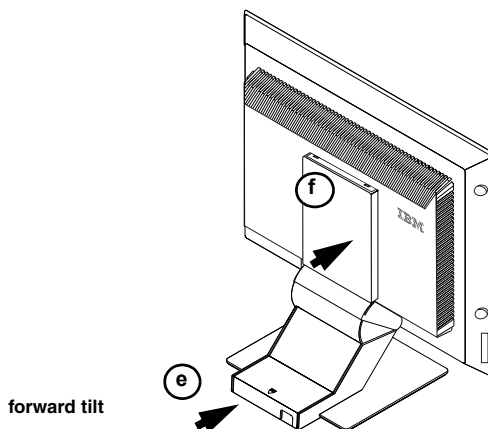

4. Insert the plug into a properly grounded electrical outlet.

Turning on your Monitor

1. Turn on the power source and your computer.
2. To turn on your monitor, push and release the power switch marked . To turn off your monitor, push and release the power switch again.
3. Turn on the monitor and then the computer.
4. To update or install device drivers, follow the instructions in the **Installing the Device Driver** section on page 8.
5. To optimize the displayed image, run Image Setup by following the instructions in the **Automatic Image Setup** section on page 11.

Installing the Device Driver

Installing the Device Driver for Windows 95 or Windows 98

This section must be completed before continuing with the Windows 95 or Windows 98 Image Setup section on page 13.

***i** On LCD monitors, unlike CRTs, a faster refresh rate does not improve display quality. For optimal performance, use 1024 x 768 at a refresh rate of 60Hz.*

To install the device driver in Microsoft® Windows® 95 or Windows 98, do the following:

Note: You must download files from the *User's Guide and Installation Files CD* to use the Plug and Play feature in Windows 95 or Windows 98.

1. Turn off the computer and all attached devices.
2. Ensure that the monitor is connected correctly.
3. Turn on the monitor and then the system unit. Allow your computer to start the Windows 95 or Windows 98 operating system.
Your computer's Plug and Play code might warn you that your system hardware has changed. This means that it has detected your new monitor for the first time.
4. Open the Display Properties window by clicking **Start > Settings > Control Panel** and then double-clicking on the **Display** icon.
5. Click the **Settings** tab.
6. If you are using Windows 95, do the following:
 - a. Click the **Change Display Type** button.
 - b. Click the **Change Monitor Type** button.

If you are using Windows 98, do the following:

 - a. Click the **Advanced** button.
 - b. Click the **Monitor** tab.
 - c. Open the Upgrade Device Driver Wizard window by clicking on the **Change** button and then select the **Next** button.
 - d. Click the "Display a list of the known drivers for this device so that I can choose a specific driver" and then select the **Next** button.
7. Insert the *User's Guide and Installation Files CD* into the CD drive and click the **Have Disk** button.
8. Click **OK**.
9. Ensure that the CD drive letter is selected, and then select the **DRIVERS** folder.
10. Select **IBM ThinkVision LCD L150** monitor and click **OK**. The files will be copied from the CD to your hard disk drive.
11. Close all open windows and remove the CD.

12. Restart the computer.
The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Installing the Device Driver for Windows 2000 or Windows Me

This section must be completed before continuing with the Windows 2000 or Windows Me Image Setup section on page 13.

i On LCD monitors, unlike CRTs, a faster refresh rate does not improve display quality. For optimal performance, use 1024 x 768 at a refresh rate of 60Hz.

To install the device driver in Microsoft Windows 2000 Professional or Microsoft Windows Millennium Edition (Me), do the following:

Note: You must download files from the *User's Guide and Installation Files CD* to use the Plug and Play feature in Windows 2000 or Windows Me.

1. Turn off the computer and all attached devices.
2. Ensure that the monitor is connected correctly.
3. Turn on the monitor and then the system unit. Allow your computer to start the Windows 2000 or Windows Me operating system.
4. Open the Display Properties window by clicking **Start > Settings > Control Panel** and then double-clicking on the **Display** icon.
5. Click the **Settings** tab.
6. Click the **Advanced** button.
7. Click the **Monitor** tab.
8. Click the **Properties** button.
9. Click the **Driver** tab.
10. Open the Upgrade Device Driver Wizard window by clicking on **Change** button and then select the **Next** button.
11. Select "Display a list of the known drivers for this device so that I can choose a specific driver" and then click the **Next** button.
12. Insert the *User's Guide and Installation Files CD* into the CD drive and click the **Have Disk** button.
13. Click **OK**.
14. Ensure that the CD drive letter is selected, and then select the **DRIVERS** folder.
15. Select **IBM ThinkVision LCD L150** monitor and click **OK**. The files will be copied from the CD to your hard disk drive.
16. Close all open windows and remove the CD.
17. Restart the computer.
The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Installing the Device Driver for Windows XP

This section must be completed before continuing with the Windows XP Image Setup section on page 13.

i On LCD monitors, unlike CRTs, a faster refresh rate does not improve display quality. For optimal performance, use 1024 x 768 at a refresh rate of 60Hz.

To install the device driver in Microsoft Windows XP, do the following:

Note: You must download files from the *User's Guide and Installation Files* CD to use the Plug and Play feature in Windows XP.

1. Turn off the computer and all attached devices.
2. Ensure that the monitor is connected correctly.
3. Turn on the monitor and then the system unit. Allow your computer to start the Windows XP operating system.
4. Open the Display Properties window by clicking **Start > Settings > Control Panel** and then double-clicking on the **Display** icon.
5. Click the **Settings** tab.
6. Click the **Advanced** button.
7. Click the **Monitor** tab.
8. Click the **Properties** button.
9. Click the **Driver** tab.
10. Open the Hardware Update Wizard window by clicking on **Update Driver** and then click the **Next** button.
11. Select "Install from a list or Specific location(Advanced)" and then click the **Next** button.
12. Insert the *User's Guide and Installation Files* CD into the CD drive and click the **Have Disk** button.
13. Click **OK**.
14. Ensure that the CD drive letter is selected, and then select the **DRIVERS** folder.
15. Select **IBM ThinkVision LCD L150** monitor and click **OK**. The files will be copied from the CD to your hard disk drive.
16. Close all open windows and remove the CD.
17. Restart the computer.
The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Automatic Image Setup

Image Setup (F4)

***i** The Setup Utility included on the installation CD is for displaying dot patterns. They do not replace or modify the display driver.*

The Image Setup (F4) instructions require the monitor to warm up for 15 minutes. This is not required for normal operation.

By pressing the Auto key, you will have direct access to Automatic Image Setup Adjustment.

When you first use your monitor you must perform Image Setup (F4). This procedure sets up your monitor to process the video signals from your computer without image discoloration or smearing. After you perform Image Setup (F4), the settings are stored and used each time you turn on the monitor.

To optimize the displayed image a set-up utility is provided on the CD. Operation of the utility is dependent on the operating system on your computer. For correct operation locate the operating system on your computer from the table below and follow the appropriate instructions. You can choose to run IMAGE SETUP (F4) for each operating system that you use. This means that if you use your monitor while running any version of Windows and also use it from within DOS (not a DOS window), you must run IMAGE SETUP (F4) for both Windows and DOS. You can run versions of IMAGE SETUP (F4) in any order.

Operating System	Corresponding Image Setup Procedure
DOS	Image Setup (F4) for DOS on page 12
Windows 95, Windows 98, Windows 2000, Microsoft Windows NT®, Windows Me or Windows XP	Image Setup (F4) for Windows 95, Windows 98, Windows NT, Windows 2000, Windows ME, Windows XP on page 13

Before you begin IMAGE SETUP (F4) for your computer:

1. Make sure the computer's video mode is set in the range of the supported screen resolution shown in the table on page 20.

You should perform IMAGE SETUP (F4) for each screen mode you use.

***i** The IMAGE SETUP (F4) process only applies to the current screen mode. When a new mode is selected, repeat this section to reset the monitor.*

Image Setup for DOS

i If the monitor is in sleep mode, it may automatically turn off while you are waiting for it to warm up. If this happens, turn off the monitor and turn it on again after a few seconds.

i If you are using PC-DOS/V, change to U.S. mode by typing CHEV US and pressing ENTER at the command prompt.



i The size and diversity of the dot pattern varies with the screen resolution.



To set up the monitor automatically in DOS, do the following:

1. Turn on the monitor first; then turn on the computer.

If the message `CHECK SIGNAL CABLE` is displayed, or if nothing is displayed, check:

- that the video interface cable is connected properly.
- the correct video adapter card is installed.
- the correct supported display mode is selected for your computer.

2. Wait approximately 15 minutes, until the monitor warms up.
3. Insert the *User's Guide and Installation Files CD* into the computer CD-ROM drive.
4. Display the command prompt screen of the DOS full-screen display.
5. Type `d:\` (change the drive letter to match your CD-ROM drive if it is not drive D).
6. Type `TESTPAT` and press ENTER.
7. Select from the screen the number for the color or text mode you want to set up.
8. Select from the screen the number for the video mode you want to set up. You can repeat this process for as many of the color and video modes as you need.
9. When the dot pattern appears, press the Image Setup () button at the bottom of the monitor. This activates the `IMAGE SETUP ()` procedure, which will optimize the display settings with the provided dot patterns.
The screen will momentarily turn black while auto adjustment proceeds.
10. When finished, the Auto Adjustment menu disappears and the screen returns to a normal display.
11. Press the ESCAPE key to exit the test pattern program.
12. Type `EXIT` at the command prompt to return to Windows.

If you use other operating systems, perform the appropriate Image Setup () for those systems using instructions given in "**Image Setup () for Windows 95, Windows 98, Windows NT, Windows 2000, Windows ME, Windows XP**" on page 13".

Setup for Windows 95, Windows 98, Windows NT, Windows 2000, Windows Me or Windows XP

i If the monitor is in sleep mode, it may automatically turn off while you are waiting for it to warm up.


i The size and diversity of the dot pattern varies with the screen resolution.

 
To set up the monitor automatically in Windows 95, Windows 98, Windows NT, Windows 2000, Windows Me, or Windows XP, do the following:

1. Turn on the monitor and then the computer.
If the message `CHECK SIGNAL CABLE` is displayed, or if nothing is displayed, check:
 - that the video interface cable is connected properly.
 - the correct video adapter card is installed.
 - the correct supported display mode is selected for your computer.
2. Wait approximately 15 minutes, until the monitor warms up.
3. Drag the icon bar and tool bar, if they are displayed, to the bottom of the screen.
4. Insert the *User's Guide and Installation Files CD* into the computer CD-ROM drive.
5. Check the operating system installed on your computer and follow the instructions from the table below.


 
Operating system installation steps

Operating System	Step 1	Step 2	Step 3
Windows 95, Windows 98, Windows 2000, Windows NT, Windows Me or Windows XP	Select START	Select RUN	Type D : \TESTPAT (change the drive letter to match your CD-ROM drive if it is not drive D) and press ENTER

 





6. When the test pattern appears, press the Image Setup () button at the bottom of the monitor. This activates the `IMAGE SETUP` procedure, which will optimize the display settings with the provided test patterns. The screen will momentarily turn black while auto adjustment proceeds.
7. When finished, the Auto Adjustment menu disappears and the screen returns to a normal display.
8. Press the Esc key to return to Windows.

You have completed the monitor setup for Windows. If you are using the DOS operating system, go to **Image Setup () for DOS** on page 12.

Manual Image Setup

Normally, you can complete the setup procedure using IMAGE SETUP (); however, if your screen image is still distorted after you perform IMAGE SETUP () or the *User's Guide and Installation CD* does not run on your system, perform MANUAL SETUP.

***i** If the monitor is in sleep mode, it might automatically turn off while you are waiting for it to warm up.*

1. Have your monitor turned on for about 15 minutes, until the monitor warms up.
2. Display the image you most frequently use on the screen.
3. Press the OSD Enter button  at the bottom of the bezel to display the initial OSD menu.
4. Use the  button to select the Image Setup icon () and press the OSD Enter button  to access.
5. Use the  button to select **Manual**. Press Enter and Clock becomes highlighted. Press Enter again and adjust the screen quality settings. Press Enter twice to select Phase, the right arrow icon, and then Enter again to select phase. Adjust Phase, then press Enter twice to save and exitsub-menu.
6. Press the Exit () button to exit Image Setup.

You have completed monitor setup.

Adjusting your LCD Monitor

User Controls Accessible Via On Screen Display (OSD)



User control features

- Direct access controls

Icon	Control	Description
	Image Setup	Activates automatic image adjustment.
	Brightness	Directly accesses the Brightness setting on the OSD main menu.
	OSD Enter	Displays the OSD main menu.
	Power Switch	Switches the monitor on and off.

- Main OSD menu controls

Icon	Control	Description
	Exit Cancel	Exits from menus and sub-menus and cancels sub-menu settings.
	Left Arrow	Moves the cursor to highlight icons and other options.
	Right Arrow	Moves the cursor to highlight icons and other options.
	OSD Enter OK	Enters menus and sub-menus and selects the highlighted option.


i The image is already optimized for many display modes; however, the user controls can be used to adjust the image to your liking.

i The settings are saved after adjustment and when exiting the OSD and will be effective thereafter.

Operation


- Press the **OSD Enter** button to display the main OSD menu.
- Use the Arrow buttons to move among the icons. Select an icon and press **OSD Enter** to access a function. If there is a sub-menu, you can move between options using the Arrow buttons, then press **OSD Enter** to select a function. Use the Arrow buttons to make adjustments. Press the **↵** button to save.
- Press the **Exit/Cancel** (**⏮**) button to move backwards through the sub-menus, cancel settings, and exit from the OSD.

On-Screen Display (OSD) Controls







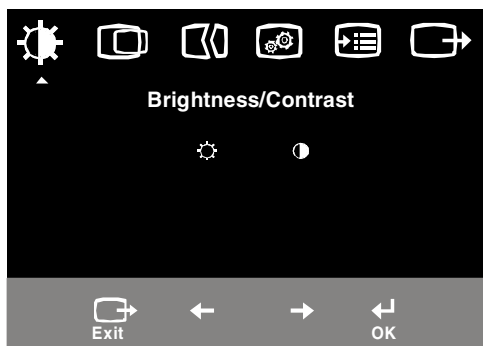















The settings can be adjusted with the user controls on the On-Screen Display (OSD). Press the OSD Enter button () to activate the OSD.









The LCD monitor needs time to become thermally stable the first time you turn it on each day. Thus, to achieve more accurate adjustments for parameters, allow the LCD monitor to warm up (be On) for at least 15 minutes before making any screen adjustments.












Initial appearance of OSD



OSD functions

OSD Icon on Main Menu	Submenu	Description	Controls and Adjustments	
 Brightness/Contrast	 Brightness	Adjusts brightness.	 	 
	 Contrast	Adjusts contrast.	 	 
 Image Position	 Horizontal Position	Moves the screen left or right.	 	 
	 Vertical Position	Moves the screen up or down.	 	 


OSD Icon on Main Menu	Submenu	Description	Controls and Adjustments
 Image Setup	 Automatic	Activates automatic image adjustment.	
	 Manual <ul style="list-style-type: none"> • Clock • Phase 	Use the ← or → button to adjust the interference. If satisfactory results are not obtained using the Phase adjustment, use the Clock adjustment and then use Phase again.	
 Image Properties	 Color <ol style="list-style-type: none"> 1. Preset Mode <ul style="list-style-type: none"> • 6500K • 7200K • 9300K 2. Custom <ul style="list-style-type: none"> • Red • Green • Blue 	Adjusts intensity of red, green and blue. 6500K makes the screen redder. 7200K adjusts the screen to the default color settings. 9300K makes the screen bluer. Increases or decreases 'red'. Increases or decreases 'green'. Increases or decreases 'blue'.	
 Options	 Information	Shows resolution, refresh rate, and product details. Note: This screen does not allow any changes to the settings.	
	 Language	The language chosen affects only the language of the OSD. It has no effect on any software running on the computer.	Select one of the 5 languages (English, French, Italian, German and Spanish) to use for the OSD.

OSD Icon on Main Menu (Continued)	Submenu	Description	Controls and Adjustments	
 Options	 Menu Position	Adjusts menu location on the screen.		
	1. Default	Returns the menu position to the default settings.		
	2. Custom			
	<ul style="list-style-type: none">Horizontal	Changes the horizontal position of OSD.	 ←	 →
	<ul style="list-style-type: none">Vertical	Changes the vertical position of OSD.	 ←	 →
	 Factory Default	Resets monitor to the original settings.		
	<ul style="list-style-type: none">CancelReset	Does not make the adjustment. Resets the settings.		
	 Accessibility	Changes button repeat rate and menu time out setting.		
	<ul style="list-style-type: none"> Button repeat rate	Selects ← or → button repeating rate.	Off - increases by 1 each time the button is pressed. Default - increases continuously while the button is pressed. Slow - increases by 1 every 2 seconds while the button is pressed.	
	<ul style="list-style-type: none"> Menu time out	Sets the length of time the OSD will remain active after the last time a button is pressed.	Use the ← or → button to select the time from 5 to 60 seconds.	
 Exit / Cancel		Exits from current OSD MENU. / Cancels adjustments and exits sub-menu screens.		

Further Information



Display Modes

Your computer controls the monitor's display mode. Refer to your computer documentation for details on how to change display modes.

The image size, position and shape might change when the display mode changes. This is normal and the image can be readjusted using IMAGE SETUP () and the monitor controls.

Unlike CRT monitors, which require a high refresh rate to minimize flicker, TFT technology is inherently flicker-free. If possible, configure your computer for 1024 × 768 addressability at 60Hz vertical refresh rate.

For the display modes listed on the next page, the screen image has been optimized during manufacture.

 For image problems, you may want to run AUTO Setup again before consulting this section. In most cases, AUTO SETUP can fix the problems. See **Image Setup** () for DOS on Page 12 for details.

Factory Set Display Modes

Addressability	Refresh Rate	Horizontal Frequency
640 × 350	70 Hz	31.5 kHz
640 × 480	75 Hz	37.5 kHz
640 × 480	72 Hz	37.8 kHz
640 × 480	66 Hz	35.0 kHz
640 × 480	60 Hz	31.5 kHz
720 × 400	70 Hz	31.4 kHz
800 × 600	56 Hz	35.1 kHz
800 × 600	60 Hz	37.8 kHz
800 × 600	72 Hz	48.0 kHz
800 × 600	75 Hz	46.8 kHz
832 × 624	75 Hz	49.7 kHz
1024 × 768 †	60 Hz	48.4 kHz
1024 × 768	70 Hz	56.5 kHz
1024 x 768	75 Hz	60.0 kHz

† Recommended

Note: VESA timings are as detailed in the VESA "Display Monitor Timing Specification".
Version 1.0, Revision 0.8, dated 09/17/98.

Power Management

If your computer has previously been used with a CRT monitor and is currently configured to a display mode outside the range that the Flat Panel monitor can display, your monitors failsafe feature will display an image sufficient to allow you to re-configure the computer, preferably to 1024 x 768 at 60Hz.

The power management feature is invoked when the computer recognizes that you have not used your mouse or keyboard for a user-definable period. There are several states as described in the table below.

As an ENERGY STAR® Partner, IBM has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

For optimal performance, switch off your monitor at the end of each working day, or whenever you expect to leave it unused for long periods during the day.

State	Power Indicator	Screen	Restoring Operation	Compliance
On	Steady green	Normal		
Active Off	Blinking green	Blank	Press a key or move the mouse. *	ENERGY STAR®

* There may be a slight delay before the picture reappears.

Product Disposal

The fluorescent lamp in the liquid crystal display contains a small amount of mercury. Dispose of it as required by local ordinances and regulations.

Troubleshooting

If you have a problem setting up or using your monitor, you might be able to solve it yourself. Before calling your retailer or IBM, try the suggested actions that are appropriate to your problem.

Problem	Possible Cause	Suggested Action	Reference
Computer does not boot after the graphics adapter is installed	There is another graphics adapter in the computer	<ul style="list-style-type: none">◆ Remove the other graphics adapter plugged into one of the expansion slot.◆ If the card is built-in to the motherboard, check your system manual for instructions on how to disable the built-in adapter.	Connecting your Monitor section on page 6
The screen image is garbled or unusable (rolling screen images, overlapping screen images or a blank screen)	The display driver is trying to use a setting your monitor does not support	<ul style="list-style-type: none">◆ Select the correct monitor.	Connecting your Monitor section on page 6
Screen is blank and power indicator is off	No power to monitor	<ul style="list-style-type: none">◆ Ensure that the electrical outlet and the monitor are both switched on.◆ Check that the power cord is firmly plugged into the electrical outlet and the power supply unit.◆ If the power cord plug has a removable fuse, replace it.◆ Try another power cord.◆ Try another electrical outlet.	Connecting your Monitor section on page 6

Problem	Possible Cause	Suggested Action	Reference
Screen is blank and power indicator is steady green	Brightness and Contrast may be too low	<ul style="list-style-type: none"> ♦ Adjust brightness and contrast. 	User Controls Accessible Via On Screen Display (OSD) section on page 15
Screen is blank and power indicator is blinking green.	The monitor is in the Power Saving state	<ul style="list-style-type: none"> ♦ Press any key on the keyboard or move the mouse to restore operation. ♦ Check the Power Management software on your computer 	Power Management section on page 21
	The monitor is not receiving a video signal	<ul style="list-style-type: none"> ♦ Check that the signal cable is firmly connected to the computer. ♦ Check that no pins are bent in the signal cable connector. 	Connecting your Monitor section on page 6
	The monitor is in the Active Off state	<ul style="list-style-type: none"> ♦ Press any key on the keyboard or move the mouse to restore operation. ♦ Check the Power Management software on your computer. 	Power Management section on page 21
	Display mode of the computer is outside the range of the monitor	<ul style="list-style-type: none"> ♦ Reconfigure the computer to use a supported display mode. 	Further Information section on page 20
Image appears to be smeared	There are noises in the video signal	<ul style="list-style-type: none"> ♦ Select Image Setup menu in the OSD. Then select MANUAL to adjust Phase/Clock settings. 	User Controls section on page 17
Image appears to be discolored	The Color setting may be incorrect	<ul style="list-style-type: none"> ♦ Adjust the Color settings. 	User Controls section on page 17

Problem	Possible Cause	Suggested Action	Reference
A few dots are missing, discolored, or inappropriately lighted.	♦ A small number of missing, discolored, or lighted dots may be present on the screen, which is an intrinsic characteristic of the TFT LCD technology and is not an LCD defect.		

Help and Service Information

If you are unable to correct the problem yourself, you may seek further help as follows:

Call the IBM HelpCenter®.

In the US call 1-800-772-2227

In Canada (Toronto Only) call 416-383-3344

In Canada (all others) call 1-800-565-3344

***i** If possible, stay by your computer. Your Technical Support Representative may wish to go through the problem with you during the call.*

***i** More help, late-breaking news and details of the latest accessories for these products may be found on the worldwide web at:*

<http://www.pc.ibm.com/us/accessories>

In other countries contact your dealer, retailer, or other IBM authorized Servicer.

Before calling, please have available as much of the following information as possible:

1. Model and serial number from the label on your monitor.
2. Purchase receipt.
3. Description of problem.
4. Computer type and model.
5. System configuration (hardware fitted, etc.).
6. System BIOS version number.
7. Operating System and version number.
8. Display driver version number.
9. Video Adapter Type.

Specifications

This color monitor (Type-model 6636-xx2) uses a 15-inch TFT LCD

Dimensions	Height: Depth: Width:	370 mm (14.57 in.) 214 mm (8.43 in.) 363.6 mm (14.32 in.)
Weight	Unpackaged: Packaged:	4.202 Kg (8.85 lb) 5.620 Kg (12.379 lb)
Tilt	Tilt:	– 4° / + 40°
Image	Viewable Image Size: Maximum Height: Maximum Width: Pixel Pitch:	381 mm (15.0 in.) 228 mm (8.98 in.) 304 mm (11.97 in.) 0.297 mm (.010 in.) (H) × 0.297 mm (.010 in.) (V)
Power Input	Supply Voltage: Max Supply Current:	100 - 240 V ac, 50/60 Hz 0.5 A
Power Consumption	Normal Operation: Active off:	< 25 W < 2 W
Video Input	Input Signal: Horiz. Addressability: Vert. Addressability: Clock Frequency:	Analog Direct Drive, 75 ohm 0.7 V 1024 pixels (max) 768 lines (max) 80 MHz
Communications	VESA DDC:	2 B
Supported Display Modes	VESA Standard modes between Horiz. Frequency: Vert. Frequency:	IBM, VESA, HP, Sun, Mac 30 kHz - 61 kHz 56 Hz - 75 Hz
Environment	Temperature: Operating: Storage: Shipping: Humidity: Operating: Storage: Shipping:	10 to 35° C (5 to 95° F) - 20 to 60° C (-4 to 140° F) - 20 to 60° C (-4 to 140° F) 10 to 80% 5 to 95% 5 to 95%

i Power consumption figures are for the monitor and the power supply combined.

Service Information

The following parts are for use by IBM service or IBM authorized dealers to support the customer warranty. Parts are for service use only.

Model Type 6636-XX2

31P9960	6636-AB2	Monitor - Stealth Black
31P9963	6636-AB2	Stand - Stealth Black
31P9965	6636-AB2	Analog Video Cable

Notices and Trademarks

This section contains information on notices and trademarks.

Notices

IBM may not offer the products, services, or features discussed in this document in all countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing
IBM Corporation
North Castle Drive
Armonk, NY 10504-1785
U.S.A.*

The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law: INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product, and use of those Web sites is at your own risk.

Trademarks

The following terms, used in this publication, are trademarks or service marks of the IBM Corporation in the United States, other countries, or both:

IBM Logo

ThinkVision

HelpCenter IBM

ENERGY STAR[®] and the ENERGY STAR[®] logo are U.S. Govt. registered trademarks.

Microsoft[®] Windows[®], and Windows NT are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, product, and service names may be trademarks or service marks of others.

© Copyright International Business Machines Corporation 2003. All rights reserved.

